



Sharper Image SVC430 Disassembly

Prerequisite Only

Written By: Kathryn Mattingly



INTRODUCTION

Prerequisite Only



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Sharper Image SVC430 Disassembly



i Power off your device before you begin.

- Use your thumb to push down on the lever that says "open" while simultaneously pushing up the latch with your other thumb.

Step 2




- Once the latch is free, simply pull the front of the waterproof case off and slide the camera out.


Step 3



- Locate the bottom of the device.
- Now, using the metal screwdriver, unscrew the screw on the bottom of the device.

Step 4

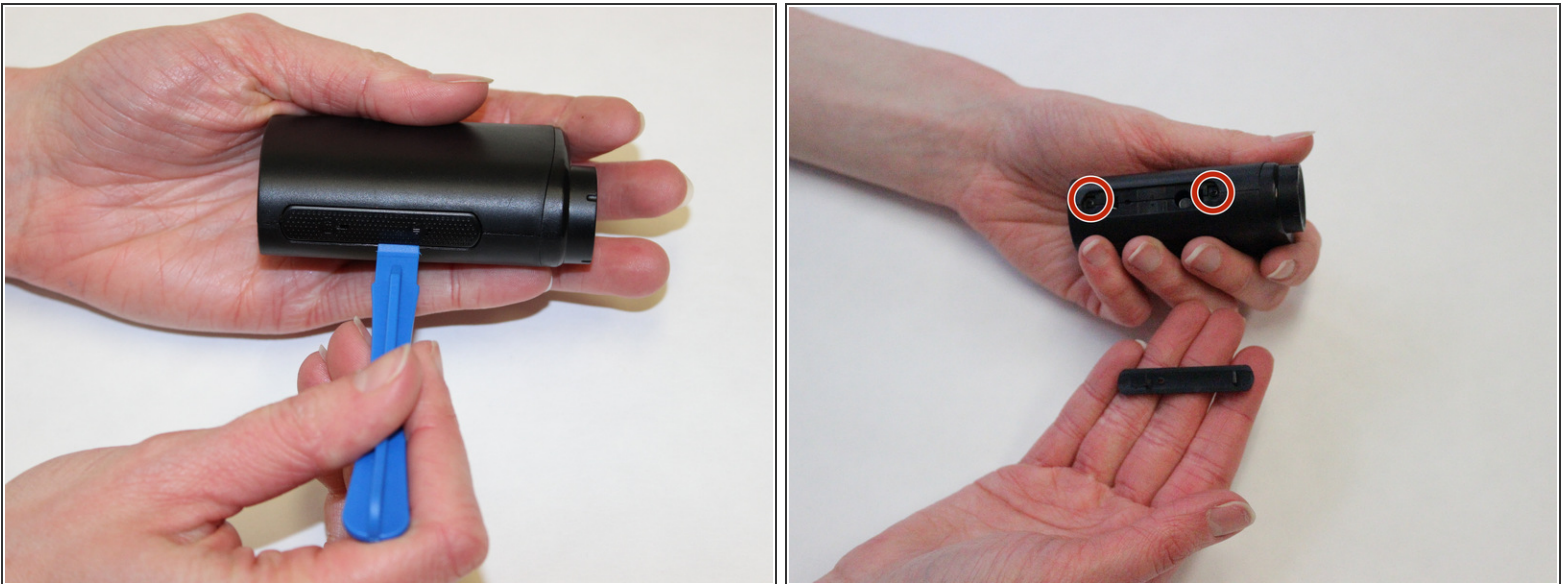

 This panel should come off easily, do not apply too much pressure.



- Use the plastic opening tool to pry open the plastic panel from the top of the camera.
- Locate the two screws on the top of the device.

Step 5



- Use the JIS J0 screwdriver to unscrew the two screws on the top of the device.

Step 6

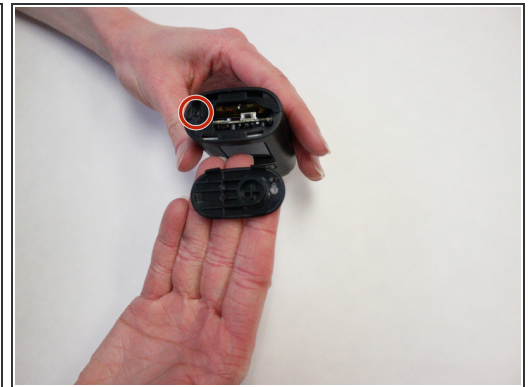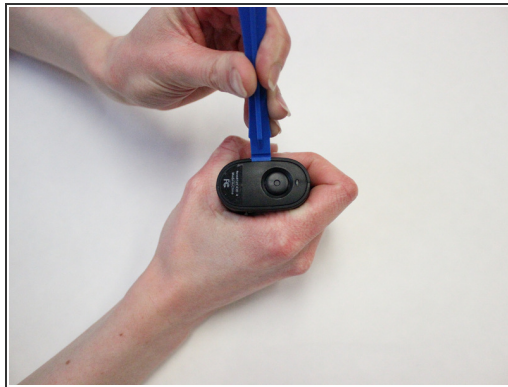

- Use the plastic opening tool to pry off the back panel.


⚠ The back panel will come off easily.

Step 7



- Use the metal screwdriver to unscrew the screw from the back of the device.

Step 8

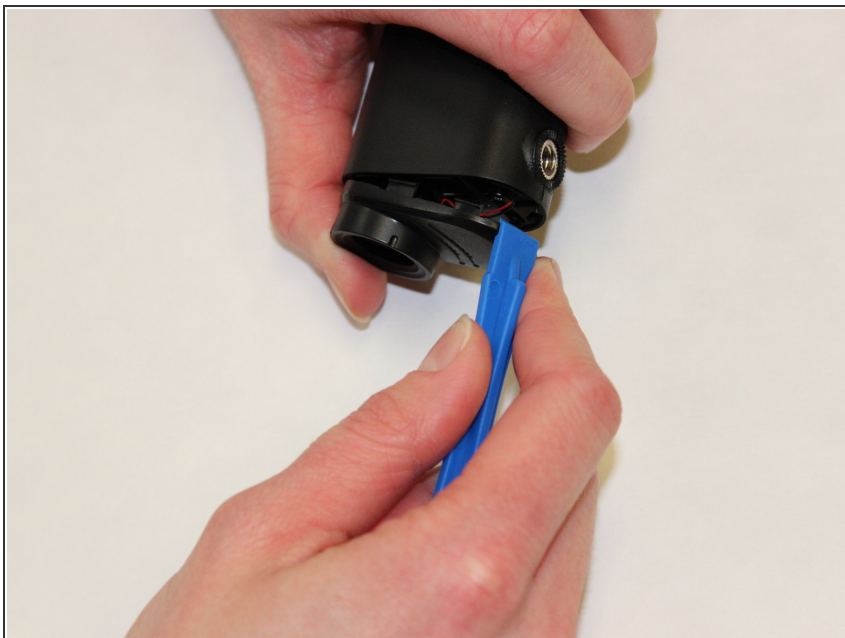


- Use the plastic opening tool to pry off the front panel of the device.

Step 9



- Using the screwdriver, unscrew the screw located underneath the front panel.

Step 10

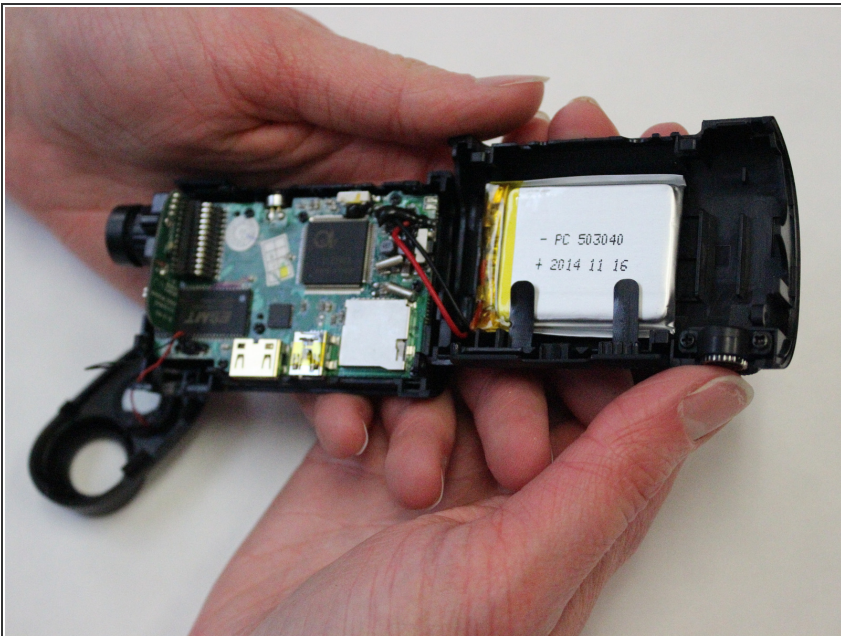

- ⚠ Be gentle with the device since there are wires attached to the front plate and two halves.
- Gently pull both sides of the device to expose the interior of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 06:15:29 PM.